



Set Voltage Output 300V

1, Click “SETUP -> Binary”

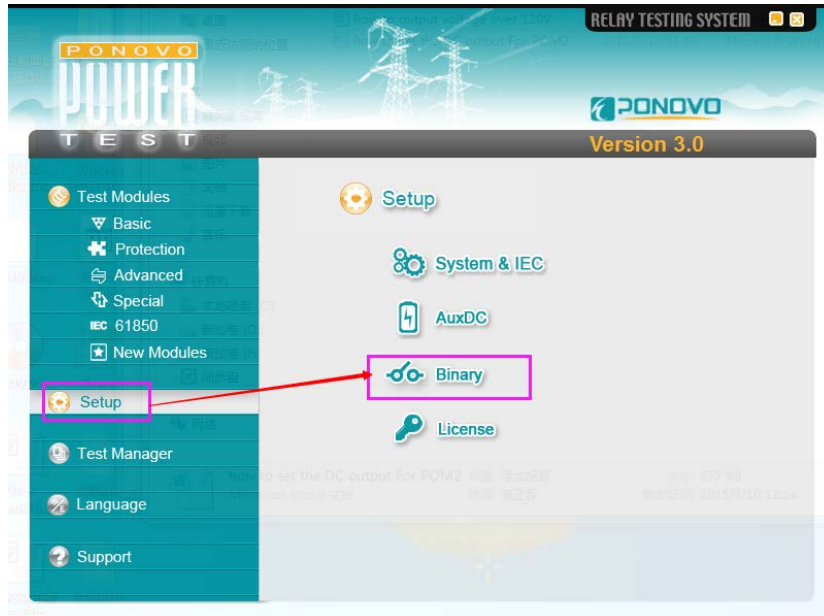

2, Click “Online”

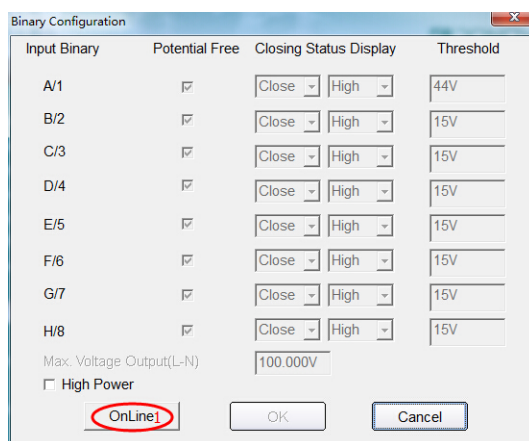

3, Change “Max. Voltage Output(L-N) to 300V, Press OK.

Binary Configuration

Input Binary	Potential Free	Closing Status Display		Threshold
A/1	☒	Close	High	44V
B/2	☒	Close	High	15V
C/3	☒	Close	High	15V
D/4	☒	Close	High	15V
E/5	☒	Close	High	15V
F/6	☒	Close	High	15V
G/7	☒	Close	High	15V
H/8	☒	Close	High	15V

Max. Voltage Output(L-N) 300 2

☐ High Power

OnLine OK 3 Cancel

4, Then kit can output 300V .