


# SOTF Check

This module is used to test **Switch On To Fault** function of line protection.

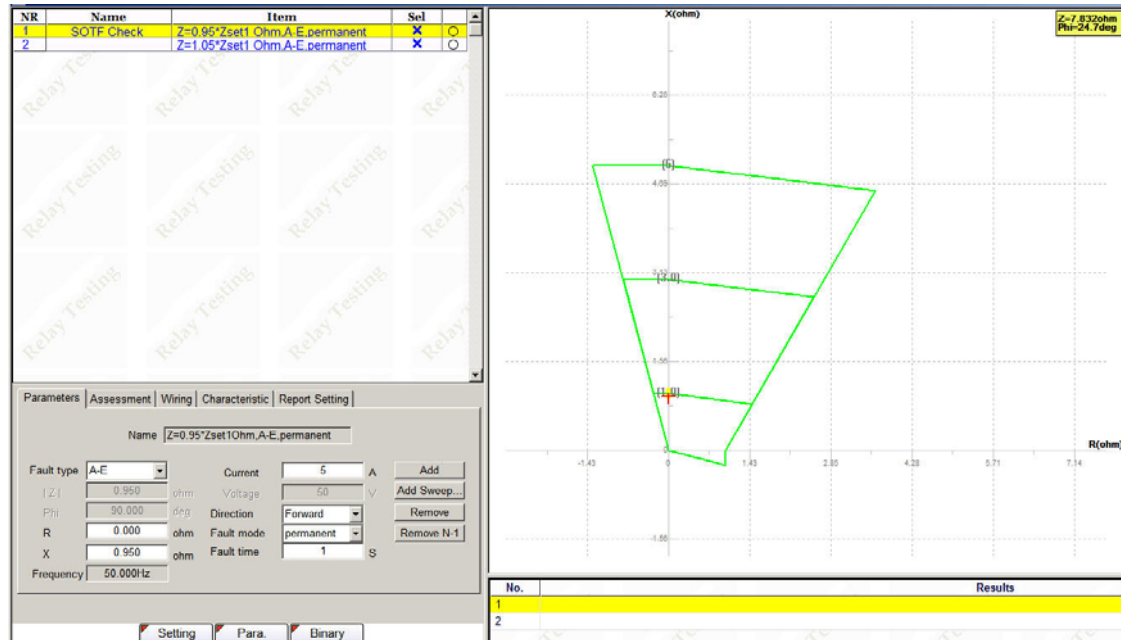

The way to set test parameters is the same as distance module. Please refer to distance module for more details.

**Note:** The prefault time must be set as zero in order to have proper test result.